


REVISION HISTORY			
REV	DESCRIPTION	DATE	APPROVED
A	SEE ECN # 1431	4/22/2004	JCW
B	SEE ECN # 1431	5/4/2004	JCW
C	SEE ECN # 1431	5/4/2004	JCW

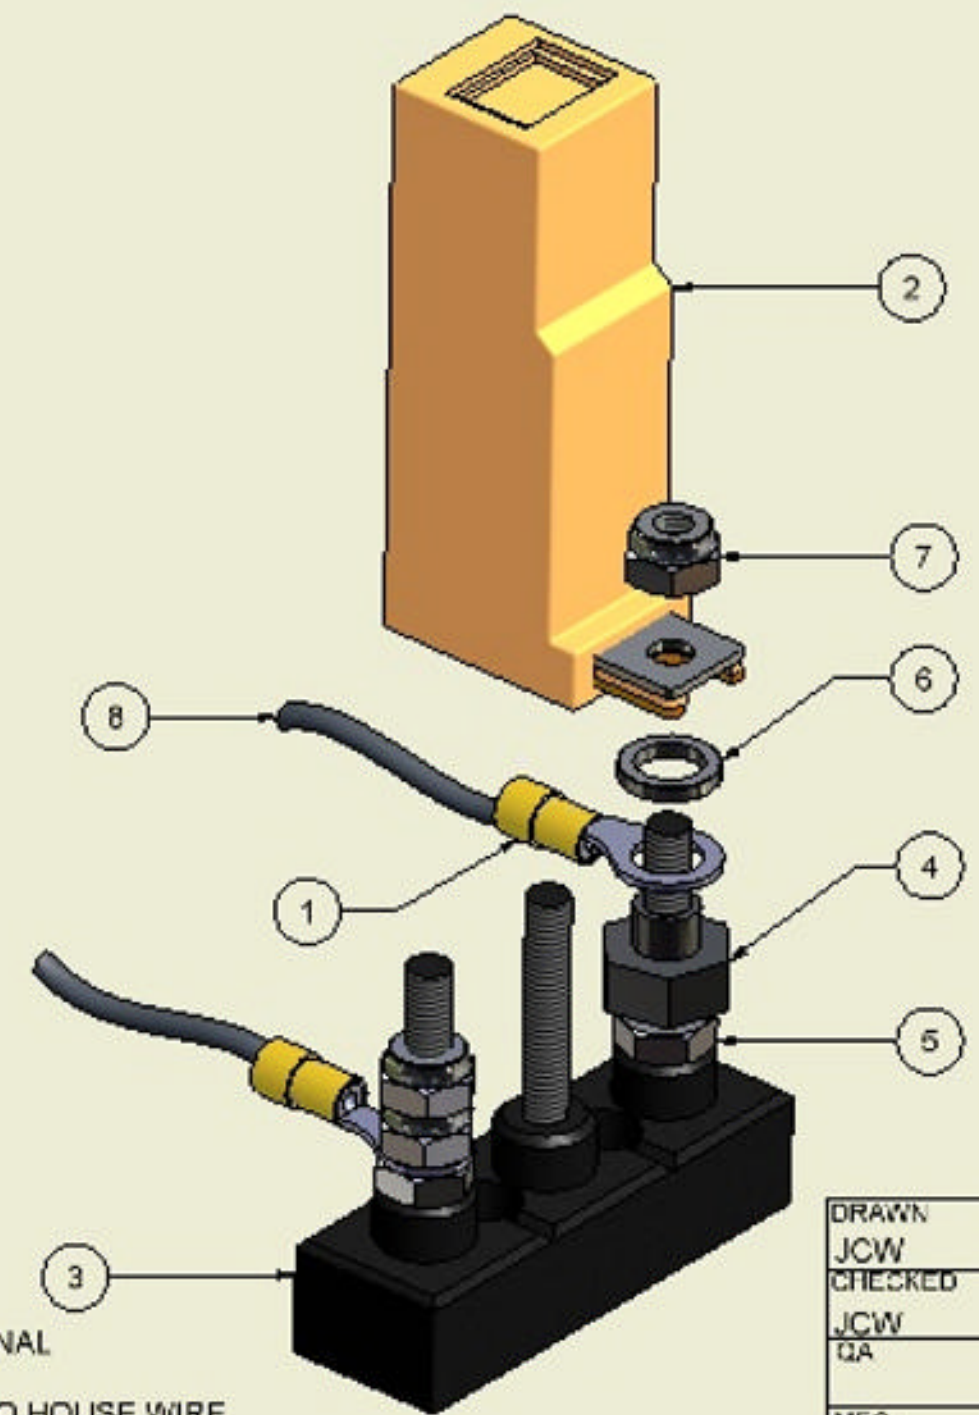

CPI INSTALLATION INSTRUCTIONS

1. REMOVE HEX NUTS (ITEM 5) FROM TERMINAL
2. CUT RING TERMINAL FROM HOUSE WIRE
3. CRIMP NEW RING TERMINAL (ITEM 1) ONTO HOUSE WIRE
4. INSTALL HEX SHOULDER WASHER (ITEM 4) OVER NUT
5. INSTALL RING TERMINAL (ITEM 1) OVER SHOULDER WASHER
6. INSTALL WASHER (ITEM 6) OVER RING TERMINAL
7. INSTALL CPI
8. INSTALL NUT (ITEM 7) AND TIGHTEN SECURELY.

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	12439-16	RING TERMINAL 3/8"
2	1		UTE CPI ASSEMBLY
3	1		AAR TERMINAL BLOCK
4	1	16266-01	HEX SHOULDER WASHER
5	2		HEX NUT
6	1	16269-01	FLAT WASHER
7	3		NUT
8	2	wire	HOUSE WIRE

DRAWN JCW 3/18/2004	CHECKED JCW 4/21/04	ULTRA-TECH ENTERPRISES, INC. TITLE CPI INSTALLATION DIAGRAM	
MFG	APPROVED	SIZE B	DWG NO 16220-98
		SCALE	REV C
		SHEET 1 OF 1	